



Eddie Bauer® Women's Packable Wind Jacket.  
EB501

PRODUCT MEASUREMENTS

	XS	S	M	L	XL	2XL	3XL	4XL
Chest Size (inches)	19 1/4	20 1/4	21 1/4	22 3/4	24 1/4	25 3/4	27 3/4	29 3/4
Sleeve Length	32 3/4	33 1/4	33 3/4	34 1/4	34 5/8	34 7/8	35 1/4	35 3/8
Body Length at Back	25	25 1/2	26	26 1/2	27	28	28 1/2	29

SLEEVE LENGTH

Start at center of neck and measure down shoulder, down sleeve to hem.

BODY LENGTH AT BACK

Measured from high point shoulder to finished hem at back.